



Safety & Usage Information

Important: Follow all safety precautions and usage tips to ensure safe and reliable operation of your mobile phone.



Safety Warnings

Keep your device away from small children and pets

Keep your device and all accessories out of the reach of small children and pets. Small parts may cause choking or serious injury if swallowed.

Protect your hearing

Excessive exposure to sound at high volumes can cause permanent hearing damage. Always turn down the sound before plugging the earphones into the phone and use only the minimum volume setting necessary to hear your conversation or music.

Install mobile devices and equipment with caution

Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted. Avoid placing your device and accessories near or in an airbag deployment area.

Improperly installed wireless equipment can cause serious injury when airbags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.
- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices.
- Never place batteries on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.



- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 6 inches (15 cm) between mobile devices and pacemakers to avoid potential interference. If you have any reason to suspect that your device is interfering with a pacemaker or other medical device, turn off the device immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the device in potentially explosive environments

Do not use your device at service stations or near fuels or chemicals. Turn off the device whenever directed by warning signs or instructions. Your device could cause explosions or fire in and around chemical storage, transfer, or blasting areas. Do not store or carry

flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

Reduce the risk of repetitive motion injuries

While using your device, hold the device with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

Do not use the device if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hand and face. Take the device to an authorized service center to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.



CAUTION

Drive safely at all times

Avoid using your device while driving and obey all regulations that restrict the use of mobile devices while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile device in a certain area.

Use only approved accessories

Incompatible accessories may damage your device or cause injury.

Turn off the device near medical equipment

Your device can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the device or disable the wireless functions when in an aircraft

Your device can cause interference with aircraft equipment. Follow all airline regulations and turn off your device or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect the device, batteries and chargers from damage

- Avoid exposing your device and batteries to very cold or very hot temperatures (below 32° F or above 115° F).
- Extreme temperatures can deform the device and reduce the charging capacity and life of your device and batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your device carefully and sensibly

- Disassembling your device may cause an electric shock.



- Do not allow your device to get wet. Do not handle your device with wet hands. Water damage to your device can void your manufacturer's warranty.
- Avoid using or storing your device in dusty, dirty areas to prevent damage to moving parts.
- Your device is a complex electronic device. Protect it from impacts and rough handling to avoid serious damage.
- Do not paint your device, as paint can clog moving parts and prevent proper operation.
- If your device has a camera flash or light, avoid using it close to the eyes of children or animals.
- Your device may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

Your device emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids,

medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.

Usage Tips

Allow only qualified personnel to service your device

Allowing non-qualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life. Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.



Handle SIM cards and memory cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-colored contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Properly shielded and grounded cables and connectors must be used to meet FCC emission limits. Ekit is not responsible for any radio or television interference caused by using other than recommended cables or connectors.



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

These devices comply with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) These devices may not cause harmful interference, and (2) these devices must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) certification information

Your device conforms to international standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile devices that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 W/kg.

During testing, the maximum SAR recorded for this model was 0.307 W/kg. In normal use, the actual SAR is likely to be much lower, as the device has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your device reduces your overall exposure to RF energy.

Correct disposal of this product



(Waste Electrical & Electronic Equipment) This marking on the product, accessories or literature indicates that the product and its electronic accessories, such as batteries, chargers, headsets, or USB cables should not be disposed of with other household wastes at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material



resources. Household users should contact either the retailer where they purchased this product or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal, non-commercial use. You may not use any content or services in a manner that has not been authorized by the content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service

Safety and Usage Information



provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed on this device.



Contents

Safety Warnings	i	Display Icons	13
Safety Precautions	v	Access Main Menu	14
Usage Tips	viii	Keyboard shortcuts	15
Disclaimer	xiii	-Switch to Silent mode	15
Unpack	1	-Turn on/off the Flashlight	15
Install the SIM card and battery	2	-SIM1 Voice mail	16
Charge the battery	4	-SIM2 Voice mail	16
-Charge the battery with the wall charger	4	-Call log	16
-Charge the battery with the PC data cable	5	-Speed dial	16
Insert a memory card (optional)	5	-Contacts list	17
Switch on/off your phone	7	-Customized shortcuts	17
Phone layout – front	8	Locking the keyboard	17
Phone layout – back	9	-Lock the keyboard	17
Phone keys and functions	10	-Unlock the keyboard	18
		Calling	19
		-Place a call	19
		-Answer a call	20
		-Reject an incoming call	20

-Call an international number	20	-Copy contacts to memory locations	32
-Return a missed call	21	-View phonebook memory status	32
-View Call logs	21	File manager	33
-Set speed dial numbers	22	-Open a file	33
-Specify a voicemail server	23	-Create new folders	33
-Listen to voicemail	24	-Sort files or folders	34
Messaging	25	-Rename folders	34
-Send a text message	25	-Delete files or folders	35
-Use message templates	26	-Copy files or folders	35
-View a text message	27	-Format a memory location	35
-Receive broadcast messages	27	Audio player	37
Contacts	29	-Listen to music	37
-Add a new contact	29	-Change play list settings	38
-Delete a contact	30	Image viewer	40
-Search for contacts	30	-View images	40
-Customize caller groups	31		

-Change the image browsing style	40	-Delete saved radio stations	47
-Delete images	41	Alarm	48
-Rename images	41	Calendar	50
-Use an image as wallpaper	41	-Add tasks	50
-Change folder	42	-View tasks by date	52
Video player	42	-View all tasks	52
-View videos	42	-Delete tasks	53
FM radio	43	Calculator	54
-Listen to the FM radio	44	-Perform mathematical calculations	54
-Scan for radio stations	44	Sound recorder	55
-Manually tune a radio station	45	-Record audio with the sound recorder	55
-FM Radio via the external speaker	45	-Listen to sound recordings	56
-FM radio background playing	46	-Delete sound recordings	56
-Edit radio station names	46	Call settings	58
		-Activate call diverting	58

-Activate call barring	60	-Auto power on/off settings	70
-Activate call waiting	61	-Power management	71
-Activate any-key answer mode	62	-Restore to factory settings	71
-Activate SMS replying	62	Display settings	72
-Activate Connect prompt mode	63	-Change the wallpaper	72
-IP shortcut key	63	-Disable clock and network displaying	73
-50 sec voice call alert	64	-Select power on/off animation effect	73
-Dual-SIM settings	64	-Change the contrast settings	74
Network settings	66	-Adjust the display backlight time	74
-Network selection	66	-Adjust the keypad light time	75
-Line selection	67	Security settings	75
-Hiding your ID	67		
-Activate Flight mode	68		
Phone settings	68		
-Time and date settings	68		
-Language settings	69		
-Shortcut settings	69		



Setup Your Phone

Prepare your phone for its first use.

Unpack

The following items are included in your product's box:


- ekit V4D mobile phone
- battery
- wall charger
- USB cable
- user guide

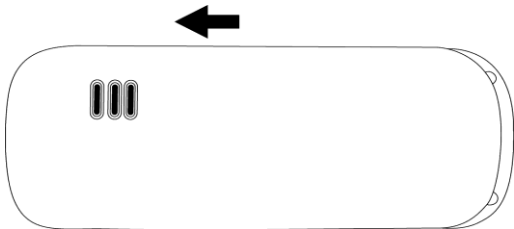
Note: The items supplied with your device may vary depending on the software and accessories available in your region or offered by your service provider.

Install the SIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card with subscription information, such as a PIN and optional services.

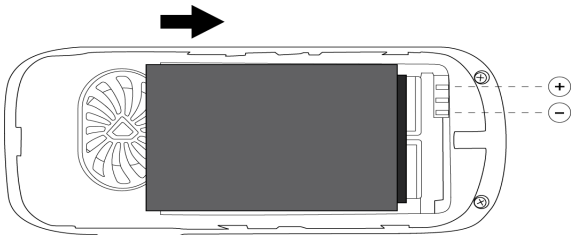
To install the SIM card and battery,

1. If the device is on, press and hold  to turn it off.
2. Slide the battery cover in the direction of the arrow to remove it:

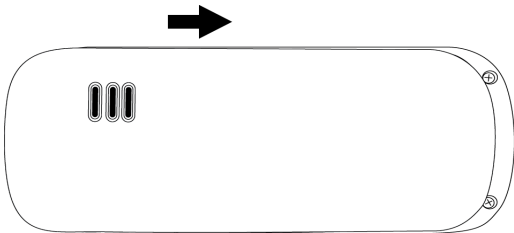


3. If needed, remove the battery.

4. Insert one or more SIM cards.
5. Insert the battery.



6. Replace the battery cover.



Note: Your mobile phone accepts two SIM cards. You can change

settings of your SIM cards in **Settings menu** (see p. 64).

Charge the battery

Before using the device for the first time, you must fully charge the battery. You can charge the battery with the wall charger or by connecting the phone to a PC with the supplied USB data cable.

[Charge the battery with the wall charger](#)

To charge the battery via a standard power supply,

1. Plug the small end (mini-USB) of the USB Cable into the mini-USB port on the phone.
2. Plug the large end (USB) of the USB Cable into the wall charger.
3. Plug the power socket into a standard power outlet.
4. When the battery is fully charged (i.e. the battery icon is no longer moving), unplug the wall charger from the phone and then from the power outlet.

Note: While charging, the battery may heat up. This is normal and should not affect the battery's lifespan or performance.

Charge the battery with the PC data cable

To charge the battery via a computer,

1. Plug the small end (mini-USB) of the USB Cable into mini-USB port on the phone.
2. Plug the large end (USB) of the USB Cable into a USB port on a computer.
3. When the battery is fully charged (i.e. the battery icon is no longer moving), unplug the USB cable from the phone and then from the computer.

Insert a memory card (optional)

To store additional multimedia files, you must insert a memory card. Your device accepts microSD™ memory cards (2GB maximum). To insert a memory card,

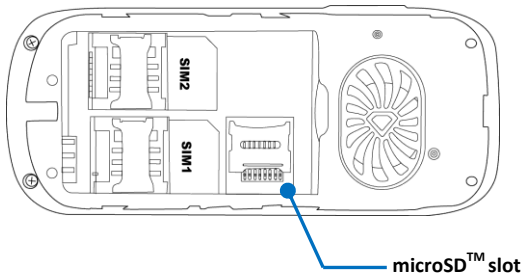
1. Remove the battery cover and battery.
2. Slide and lift the memory card door.

Setup Your Phone



3. Insert a memory card with the gold-colored contacts facing down.
4. Close and slide the memory card door to lock it into place.
5. Replace the battery and battery cover.



Note: The following picture shows your phone's microSD™ slot.



Get to Know Your Phone

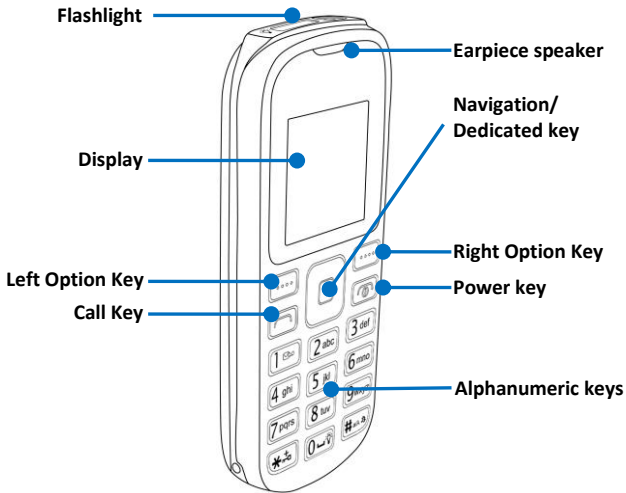
Learn about your phone's features and input functions.

Switch on/off your phone

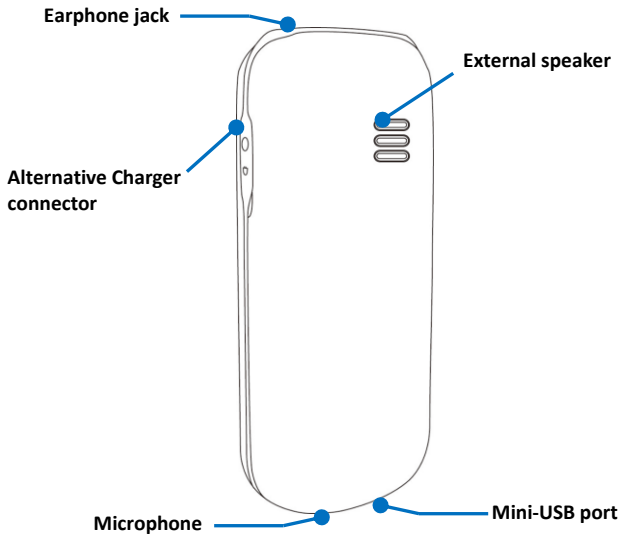
To switch on your phone, press and hold . The phone will automatically search for and connect to a cellular network. To switch off your phone, press and hold .

Note: Follow all warnings and directions from authorized personnel when in areas where the use of wireless devices is restricted, such as airplanes and hospitals.


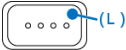 

Phone layout – front


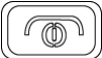 

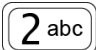 





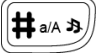 
Phone layout - back



Phone keys and functions








Key(s)	Function
	Press to go to Call Log, or to make calls.
	Press to go to the Main menu, or perform the action listed on the bottom left of the display. (Note: The left button will be indicated by a blue letter "L")
	Press the outer ring buttons to navigate menus, move the cursor when entering text, or perform dedicated actions (default actions): Up: Audio Player, Down: Write Message, Left: Alarm, Right: Shortcut Settings; Press the middle button to perform the action listed on the bottom middle of the display or confirm an input or make a call; (Note: This manual refers to this set of buttons as the main key.)







Key(s)	Function
	Press to perform the action listed on the bottom right of the display. (Note: The right button will be indicated by a blue letter “R”)
	Press and hold to switch the phone on/off, or to reject a call or go back to the Main Screen while navigating through menus.
	Press to enter the number 1. Press and hold to connect to the voicemail server for SIM1.
	Press to enter the number 2 or text. Press and hold to connect to the voicemail server for SIM2.
	Press the corresponding key to enter numbers or text. Press and hold to call a number in speed dial mode.

Key(s)	Function
	From the Main Screen, press once to show the lock function, or press twice to enter the plus sign (+) before an international dialing prefix; When entering text, press to enter symbols.
	Press to enter the number 0, or press and hold to turn on/off the flashlight; Press and hold to enter a space while texting.
	Press to switch text input modes while texting; Press and hold to switch between general mode (sound on) and silent mode (vibrate).


Display Icons


The following icons appear on the home screen of your phone's display.

Icon	Description
	SIM 1 signal strength
	SIM 2 signal strength
	Flight mode on
	Silent mode activated
	Vibrate mode activated
	Missed call
	New text or MMS message

Icon	Description
	Roaming (The number indicate which SIM card is in roaming mode)
	Alarm activated
	Earphones connected
	Battery fully charged
	Battery low (needs charging)
	When the green bars are moving, the battery is being charged

 
Access Main Menu

1. From the home screen, press  or the middle button from main key to access the main menu.
2. Press the navigational key left and right to select one option from the menu.

 
3. Press  (L) or the middle button from main key to open a menu.

Keyboard shortcuts


Switch to Silent mode

To switch between Normal, Silent and Vibrate profiles, from the home screen, press and hold . The respective profile icon will appear on the screen or no icon for the Normal mode.

 
Turn on/off the Flashlight

To turn on/off your mobile phone's flashlight, press and hold .


SIM1 Voice mail

To access SIM1 card's voice mail, from the home screen press and hold . (See page 23)

 
 
SIM2 Voice mail

To access SIM2 card's voice mail, from the home screen press and hold . (See page 23)

Call log

To access call log, from the home screen, press . (See page 21).

Speed dial

Press and hold any key from  to  to call to the correspondent speed dial number. (See page 22)

Contacts list

To open the contacts list, from the home screen, press



. For more information, see page 29.

Customized shortcuts

 
You can customize the shortcuts for the up, down, left and right keys from the main key. Press up, down, left or right key to open the customized application for the respective key. The default applications are: **Up**: Audio Player, **Down**: Write Message, **Left**: Alarm, **Right**: Shortcut Settings.

Note: For more information, see page 69.

Locking the keyboard

 
Lock the keyboard

To lock your mobile phone's keyboard:

1. From the home screen, press ,
2. Press [Lock].

Unlock the keyboard

If the screen is off, press  to turn it on. To unlock your mobile phone's keyboard:

1. From the locked home screen, press the [Unlock].
2. Press .

Note: You will be able to make emergency calls while the keyboard is locked.

Communicate With the World



Use your mobile phone to communicate with the world via voice calls, text and multimedia messages, text chat, and the Internet.

Calling

Your phone supports two SIM cards, which allows you to place and receive calls using the 2 cards.



Place a call

From the home screen,


1. Press the corresponding alphanumeric keys to enter a phone number.
2. Press , or the middle button from the main key.
3. Choose the SIM card (if you have two SIM cards on your phone) and press [OK].
4. To end the call, press .

Note: To add a number to your phonebook, press [Options], select **Add New Contact**, press [OK], Select the desired Group and enter the contact information. For more information about adding contacts, see page 29.

Answer a call



When you receive a call, press [Answer] or  to accept the call. To end the call, press .

Reject an incoming call


When you receive a call, press  or [Reject].

Call an international number

From the home screen,

1. Press  twice to enter the + character.
2. Enter the complete number to dial, including country code, area code, and phone number, and then press [Call].
3. To end the call, press .

Return a missed call

When you have a missed call, a message will be displayed on the screen. Press [Details] to see the missed call information or press [Exit] to exit. If you choose to exit, a missed call icon () will appear on the display. Go to Main Menu > **Call logs** > **Missed Calls** to view the caller's number and other information. To return the call, press [Options] and choose **Dial directly**.

View Call logs

From the main menu,

1. Select **Call logs**
2. To view history data, scroll up and down to an option and press [OK].

Option	Function
Dialed calls	View numbers of dialed outgoing calls
Received calls	View numbers of received incoming calls
Missed calls	View numbers of missed incoming calls

Option	Function
Rejected Calls	View numbers of rejected calls
Delete call logs	Erase call logs for the selected both SIM cards (missed, dialed, received and rejected calls)
Call timers	View timers for the last call, all dialed calls, all received calls, all calls or reset call timers
Call cost	View the Total cost of calls made, set the Max cost limit, the Price per unit, and Reset cost, for both SIM cards. Note: Your PIN2 code is required to reset cost counters, set cost limits, and set price per unit.

Set speed dial numbers

Assign frequently called numbers to speed dial locations for quick and convenient dialing.

Note: Before you can assign contact numbers as a speed dial number, you must add the contact to your Contacts list. (See page 29)

To set a speed dial number,

1. From the main menu, select **Contacts**.
2. Scroll to number you wish to assign as a speed dial number and press [Options].
3. Scroll to **Others** press [OK].
4. Scroll to **Speed dial settings** and press [OK].
5. Scroll to a number and press [OK].

Note: The contact number will be saved to the specified speed dial location. To call the number using speed dial, press and hold the assigned number key from the home screen.

[Specify a voicemail server](#)



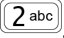 
Specify a voicemail server to receive and store voicemail messages. From the main menu,

1. Select **Messages**.

2. Inside **Messages** press [Options].
3. Scroll to **Voice mail server** and press [OK].
4. Select the SIM card you wish to change voicemail server configurations and press [OK].
5. Select which line you would like to configure and press [OK].
6. Press [Operate], scroll to **Number Settings** and press [OK].
7. Press the corresponding alphanumeric keys to enter the voicemail number and press [OK].

Note: For eKit SIM card, you don't need to set a voicemail server. Simply call 121 using the desired ekit SIM card.

Listen to voicemail

When you have new voicemail, a notification () will appear on the home screen. To access the voicemail server for SIM1, press and hold . To access the voicemail server for SIM2, press and hold . Follow

the audio instructions to listen and manage your stored voicemails.

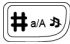 
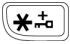 
Messaging

Your phone supports text messaging (SMS).

Send a text message

From the main menu,

1. Select **Messages > Write message**.
2. Press the corresponding alphanumeric keys to enter your message content.

Note: To switch text input mode, press . To enter symbols, press . To use text templates, add contact names and numbers, add emoticons or to save the message as a draft, press [Options].

3. When you are finished entering your text, press [Send].
4. Enter a recipient's phone number or press [Names] to locate a number in your Phonebook.

5. Press [Send] and select the SIM card to send the text message.


Note: You can specify multiple recipients for a text message selecting multiple names from your Phonebook, or using the symbol “;” between two different numbers.

Use message templates

When sending messages, you can use templates to quickly insert frequently used text. From the main menu,

1. Select **Messages**.
2. Press [Options].
3. Select **Templates** and press [OK].
4. You can save up to 10 templates on your phone.
Note: Your phone comes with default templates but you can edit the default messages.
5. To edit one template, press [Edit]. Press the corresponding alphanumeric keys to enter your message content and press [Ok] to save it.
6. To send the template as a message, press [Send]
Note: For more information, see 25.

[View a text message](#)

When you have a new message, a notification () will appear on the home screen.

From the main menu,

1. Select **Messages**.
2. Scroll to **Inbox** and press [OK].
3. Scroll to a message and press middle button from the main key.

Note: You can also read messages from the **Outbox**, **Drafts** and **Sentbox**.

[Receive broadcast messages](#)

Your service provider may use broadcast messages to notify you of new services or transmit updates. You must activate the broadcast message feature to receive these messages. From the main menu,

1. Select **Messages**.
2. Press [Options], select **Broadcast message** and press [Ok].

3. To turn on the Broadcast message, select **Broadcast launch**, scroll to **On** and press [OK].
4. To read messages, select **Read** and press [OK]
5. To change the channel settings, select **Channel Settings** and press [OK].



Manage Personal Data and Files

Your phone is equipped with a phonebook, file manager, and other tools for managing contacts, files, and personal data.

Contacts

With the contacts, you can add and manage contact information, assign contact to groups, and access numbers for various services.

Add a new contact

From the main menu,

1. Select **Contacts**.
2. Press [Options], select **New** and press [OK]
3. Scroll to a memory location and press [OK].

Note: When saving contacts to a SIM card, you can only store name and phone numbers. To enter additional contact information, such as multiple numbers, email

addresses, and caller groups, save the contact to the phone memory.

4. Enter the contact information as desired.
5. If desired, assign a caller picture, distinctive ringtone, or caller group to the contact.
6. When you are finished entering contact information, press [Save] to save your changes.

Delete a contact

From the main menu,

1. Select **Contacts**.
2. Scroll to a contact name press [Options] > **Delete**.
3. Press [OK] to confirm the deletion.

Search for contacts

Your phone provides two ways to search for contacts. To perform a quick search for contacts,

1. From the main menu, select **Contact**.

2. Scroll through phonebook list to find a contact's name or enter a few letters of the contact's name.

To perform a text search,

1. From the main menu, select **Contact**.
2. Press [Options], select **Search** and press [OK].
3. Enter all or part of the contact's name and press [OK].
4. All contact names that include the text you entered will appear in the search results.

Customize caller groups

From the main menu,

1. Select **Contacts**.
2. Scroll left and right to any group and press [Options].
3. Scroll to **Change group name** and press [OK].
4. Press the corresponding alphanumeric keys to enter the desired name and press [OK] to save it.

Copy contacts to memory locations

You can copy your contacts from a SIM card to your phone memory or from the phone memory to a SIM card.

From the main menu,

1. Select **Contacts**.
2. Scroll to a contact name and press [Options].
3. Scroll to **Copy** and press [OK].
4. Select the desired destination and press [OK] to confirm the copy.

Note: When you copy contacts from the phone memory to a SIM card, only the contact name and the primary phone number will be copied.

View phonebook memory status

From the main menu,

1. Select **Contacts**.
2. Press [Options], scroll to **Others > Memory status** and press [OK].

Note: The amount of contacts stored and total capacity will be shown for your phone memory and any installed SIM cards.

File manager

With the file manager, you can organize and manage your microSD's files and folders.

Note: You must have a microSD™ card inserted in the phone before you can use the File manager.

Open a file

From the main menu,

1. Select **File manager**.
2. Scroll to a folder and press the middle button from the main key. To go back press [Press].
3. Scroll to a file and press the middle button from the main key.

Create new folders

From the main menu,

1. Select **File manager**.

2. Navigate to the desired destination folder and press [Options].
3. Scroll to **New folder** and press [OK].
4. Enter a name for the new folder and press [OK].

Sort files or folders

From the main menu,

1. Select **File manager**.
2. Scroll to a memory location and press [Options].
3. Select **Sort** and press [OK]
4. Scroll to a sort option and press [OK].

Rename folders

From the main menu,

1. Select **File manager**.
2. Navigate to the desired folder and press [Options].
3. Scroll **Edit**, press [OK] and select **Rename**.
4. Enter a new name for the folder and press [OK] to confirm.

Delete files or folders

From the main menu,

1. Select **File manager**.
2. To delete a folder, scroll to a folder and press [Options] > **Delete**. When prompted, press [OK] to confirm the deletion.

Copy files or folders

From the main menu,

1. Select **File manager**.
2. Scroll to a folder or file and press [Options].
3. Select **Edit**, press [OK] and select **Copy**.
4. Navigate to the desired destination folder and press [OK].

Format a memory location

CAUTION: Formatting a memory location will erase all stored data. Backup any important data before formatting a memory card. Contact your retailer or service provider for more details.

From the main menu,

1. Select **File manager**.
2. Press [Options], select **More** and press [Ok].
3. Select **Format memoryCard** and press [OK]. When prompted, press [OK] to confirm the deletion.

Use Multimedia Features

Your phone is equipped with numerous multimedia features for your enjoyment, such as an audio player, FM radio, video player, and Image browser.

Audio player

With the audio player, you can listen to audio files (MP3) from your memory card.

Listen to music

To listen to music with the audio player, you must first insert a memory card on your phone's microSD™ slot. From the main menu,

1. Select **Multimedia > Audio player**. (Your phone will perform an automatic search for audio files)
2. Press [Options], select **Music list** and press [OK].
3. Select one of the available lists or press [Options] and select **New list** to add a new list.

4. Inside the chosen list, press [Options], select **Add music** and press [OK].
5. Navigate to the desired folder and select a music file.
6. Press the middle button from the main key to play the desired music.
7. Control playback with the navigation keys:
 - **Left:** press to skip to the beginning of the file or skip to the previous file; press and hold to scan backward in a file and play it.
 - **Right:** press to skip to the next file; press and hold to scan forward in a file and play it.
 - **Middle:** press to stop or resume playback.
 - **Up:** press to increase the audio player volume.
 - **Down:** press to decrease the audio player volume.

Change play list settings

While listening to music with the audio player, press [Options] to access the available settings. Scroll to the following options and set your preferences:

Option	Function
Music list	Create, view and edit music your favorite music lists
Music mark	Play, delete, rename and see the details of all the music marks created
Add	Add music to play lists and create music marks.
Set as ringtone	Set the playing song as a ringtone to a caller or alarm.
Play mode	Set the play mode for your playing list. Can be: Repeat on, Repeat All, Shuffle or off.
Settings	Change the equalizer and Lyrics displaying configurations.
Exit	Select Exit to close the music player and go back to the multimedia menu.

Option	Function
Open Review	This option will take you back to the music playing screen. You will be able to click start to start selecting a desired part of the song and stop to end the selection. After that, the player will repeat the selected portion of the song until you select [Option] > Close Review .

Image viewer

With the Image viewer, you can view and manage images. You can also set images as wallpaper.

View images

From the main menu,

1. Select **Multimedia > Image browser**.
2. Scroll to an image and press [Preview].

Change the image browsing style

1. While viewing images, scroll left and right to change the image file.

2. If you want to see images as a slide show mode, press [Options], select **Slide play** and press [OK].

Note: To change the slide show settings, press [Options], select **Slide settings** and change the desired configuration.

Delete images

1. While viewing images, scroll to an image file and press [Options], select **Delete** and press [OK].
2. Press [OK] to confirm the deletion.

Note: To perform a multiple image deletion, press [Options], select **Mark** and mark the desired pictures or all. After that, delete the marked pictures.

Rename images

1. While viewing images, scroll to an image file and press [Options], select **Rename** and press [OK].
2. Enter a new name for the image and press [OK] to save.

Use an image as wallpaper

1. While viewing images, scroll to an image file and press [Options].

2. Select **Set image as wallpaper** and press [OK].

Change folder

The image browser will display all the images places inside a folder. To change the folder,

1. Press [Options], select **Change folder** and press [OK].
2. Navigate through the folder, when you find the desired folder press [Select] to display the pictures placed inside it.


Video player

With the video player, you can view videos files on your mobile phone. To use this feature, you must insert a memory card. Video files must be stored into the Video folder to be viewed by the Video player application. The video player supports 3GP and MP4 files. **Note:** Maximum resolution supported is 176x220 pixels.

View videos

From the main menu,

1. Select **Multimedia**.
2. Scroll to **Video player** and press [OK].
3. Scroll to a file and press [Play].
4. During playback, control the video with the navigation buttons:
 - **Up**: rewind
 - **Down**: fast forward
 - **Left/Right**: adjust the volume
 - **Middle**: press to pause or resume playback

5. To stop the video and go to the videos list, press  (R).

Note: If your video files are not stored in the Video folder, you can open them using the **File manager** option from the Main menu.


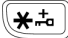 
FM radio

With the FM radio application, you can listen to local FM broadcasts.

Listen to the FM radio

A headset (sold separately) is required to use FM radio. You must connect the headset to listen to the FM radio.

1. Connect the headset to the earphone jack on your phone.
2. From the main menu, select **Multimedia > FM radio**.
3. Control the radio with the navigation buttons:
 - **Left/Right**: press to manually scan for stations
 - **Up**: press to automatically search for the next working station.
 - **Down**: press to stop or start the FM radio playing.
 - **Middle**: press to switch between listening to FM radio using the external speaker and ear phone.

Note: To change the volume press  to increase and  to decrease the volume.

Scan for radio stations

Automatically scan for radio stations to add all available stations to the channel list.

1. While listening to the radio, press [Options] > **Auto search and save.**
2. Press [Ok] to begin scanning for radio stations.
When the scan is complete, all radio stations with strong enough signal to be recognized will be added to the channel list.

Manually tune a radio station

1. While listening to the radio, press [Options] > **Manual search.**
2. Press the corresponding alphanumeric keys to enter a radio station.

Note: Press  to enter a decimal (.) character.

3. Press [OK] to tune the station.

FM Radio via the external speaker

1. While listening to the radio, press [Options] > **Open speaker.**
2. Press [OK] to listen to the FM Radio via the external speaker.

3. Press [Options] > **Close speaker** to listening to FM Radio using your ear phones.

FM radio background playing

You can set the FM Radio to play while you use other applications on your phone.

1. While listening to the radio, press [Options] > **Background play**.
2. Press [OK] to listen to the FM Radio in background playing mode.

Edit radio station names

Before you can edit radio station names, you must add radio stations to the list either manually or with the preset auto search function.

1. While listening to the radio, press [Options] > **Channel list**.
2. Scroll to a station and press [Options] > **Edit**.
3. Scroll to the Channel name and press the middle button from the main key.

4. Enter the new station name and press [OK].
5. If desired, scroll to **Frequency** and edit the station frequency.
6. Press [Save] to save your changes.

Delete saved radio stations

Before you can delete radio stations, you must add radio stations to the list either manually or with the preset auto search function.

1. While listening to the radio, press [Options] > **Channel list**.
2. Scroll to a station and press [Options] > **Delete** to delete a specific station or press [Options] > **Delete all** to delete all stations.
3. Press [OK] to confirm deletion of the Station(s).

Tools

Your phone is equipped with several productivity tools to help you organize and manage your personal activities. The available applications are alarm, calendar, calculator and voice recording.

Alarm

With this tool, you can customize up to three alarms.

[Set an alarm](#)

From the main menu,

1. Select **Tools> Alarm**
2. Scroll to one of the three existing alarms location and press [Edit].
3. To change the selected Alarm's message, scroll to **Message** and press [Edit]. Enter the new name and press [OK].

4. To change the selected Alarm's time, scroll to **Time** and press [Edit]. Set the alarm's time and press [OK].
5. To change the selected Alarm's ringtone, scroll to **Ringtone** and press [Select]. Set the alarm's ringtone and press [OK]
6. To change the selected Alarm's repeat mode, scroll to **Mode**. The options are:

Option	Function
Once	Set the selected alarm to display the configured message and play the configured ringtone only once.
Daily	Set the selected alarm to display the configured message and play the configured ringtone at the same time every day.
Weekly	Set the selected alarm as a weekly reminder. You will be able to set different days of the week for this kind of alarm.

7. Press [OK] to save your changes and activate the selected alarm.

Note: You can activate/deactivate alarms by scrolling to the desired alarm and pressing [On] to activate or [Off] to deactivate.

Calendar

With the calendar, you can add and view tasks or events, such as reminders, meetings, instructional courses and etc.

Add tasks

From the main menu,

1. Select **Tools > Calendar**.
2. Press [Options] > **Add task**.
3. To change the task's subject, scroll to **Subject** and press [Edit]. Enter the new name and press [OK].
4. To change the task's start date, scroll to **Date** and press [Edit]. Enter the new date and press [OK].
5. To change the task's time, scroll to **Time** and press [Edit]. Enter the desired time and press [OK].

6. To change the task's ringtone, scroll to **Ringtone** and press [Select]. Set the task's ringtone and press [OK].
7. To change the task's type, scroll to **Type**. The available options are:

Option	Function
Once	Choose this option for tasks that happen only once.
Daily	Choose this option for daily tasks.
Weekly	Choose this option for weekly tasks. You will be able to set different days of the week for this kind of task.
Monthly	Choose this option for tasks that repeat once a month.
Yearly	Choose this option for tasks that repeat once a year.
No reminding	For all the other options, a remainder will be shown at the time and date you selected. Choose this option if you don't want an automatic remainder for the task.

Note: If you choose **Weekly** as the type of your task, you will be able to set the days of the week for it. Scroll down, and a table will be shown. Scroll left and right to navigate. Press [Select] to mark and [Cancel] to unmark one day of the week. After selecting the desired days, scroll down to choose the **Deadline date** for you task.

8. To change the task's end date, scroll to **Deadline date** and press [Select]. Enter the desired date and press [OK].
9. Press [Save] to save the task.

View tasks by date

From the main menu,

1. Select **Tools > Calendar**.
2. Scroll to any highlighted day in the calendar.
3. Press [Options] > **View tasks** to see events scheduled for that day.

View all tasks

From the main menu,

1. Select **Tools > Calendar**.

2. Press [Options] > **All tasks** to see all scheduled events.

Delete tasks

There are three different ways to delete tasks from your calendar. You can delete one-by-one, all the tasks from the day or all the scheduled tasks.

To delete all the scheduled tasks, from the main menu,

1. Select **Tools > Calendar**.
2. Press [Options] > **Clear all**.
3. Press [OK] to confirm deletion of all the tasks.

To delete one or all the tasks of one specific day, from the main menu,

1. Select **Tools > Calendar**.
2. Scroll to any highlighted day in the calendar.
3. Press [Options] > **View tasks** to see events scheduled for that day.

4. Scroll to the desired task. Press [Options] and select **Delete** to delete selected task or select **Delete all** to delete all the tasks from the day.
5. Press [OK] to confirm deletion of the task(s).

Note: If you delete a daily, weekly, monthly or yearly task, you will delete all the task's replicates.

Calculator

With the calculator, you can perform basic mathematical calculation.

Perform mathematical calculations

From the main menu,

1. Select **Tools > Calculator**.
1. Enter a number.
2. Press the navigation key in the direction that corresponds to the desired function.
3. If it is a binary function, enter another number.

4. If it is unary function, select it and press the middle button from the main key.
5. Press [Equal] to view the result.

Sound recorder

With the sound recorder, you can record voice memos or capture snippets of live audio. The recordings will be saved inside the folder **Audio**.



Record audio with the sound recorder

From the main menu,

1. Select **Tools > Recorder**.
2. Press [Options] > **Start recording** to begin recording.
The recorder will begin recording. Press [Pause] to pause the recording and press [Resume] to continue recording.
3. Press [Stop] to end and save the recording.

Listen to sound recordings

After making a recording, you will be able to listen to it using the recorder application.

1. Scroll left and right and select the play button (the button is represented by the icon ).
2. Press the middle button from the main key to play. Press up and down from the main key to change the playing volume.
3. To stop, scroll left and right and select the stop button (the button is represented by the icon ).
4. Press the middle button from the main key to stop.

Note: You can also use the audio player to play all your recorder files. See page 37 for more details.

Delete sound recordings

After making a recording, you will be able to delete the current recorded file using the recorder application. From the recorder application,

1. Press [Options] > **Delete** to delete the recording.

2. Press [OK] to confirm deletion of recorded file.

Note: You can also use the file manager application to delete and manage all your recordings. See page 33 for more details

Settings

Customize various functions and options from the settings menu. From the main menu, select **Settings**.

Call settings

In this section, you can change settings such as activate/deactivate standby mode, dual call divert, set default SIM for calling, texting or speed dial, call barring and waiting, select reject mode and etc.

Activate call diverting

If your SIM card supports the call diverting feature, you can activate it through your service provider. From the main menu,

1. Select **Settings > Call settings > Call divert**.
2. Select the SIM card.
3. You will be able to select any of the following options by pressing [OK]:

Option	Function
Unconditional transfer	Divert all the call.
Divert if busy	Divert the call when the SIM card is busy.
Divert if no answer	Divert the call if there is no answer from a SIM card.
Divert if unreachable	Divert the call if a SIM card is unreachable.
Cancel all diverts	Select this option to cancel all the types of call diverting.

4. After selecting one of the options, scroll to **Activate** and press [OK] to activate the call diverting.
5. Scroll to **Off** to deactivate the call diverting.
6. Scroll to **Query status** to check if the selected type of call diverting is activated or deactivated.

Activate call barring

If your SIM card supports the call barring feature, you can activate it through your service provider. From the main menu,

1. Select **Settings > Call settings > Call barring**.
2. Select the SIM card.
3. You will be able to select any of the following options by pressing [OK]:

Option	Function
All outgoing calls	For all outgoing calls
All incoming calls	For all incoming calls.
Incoming calls when roaming	For incoming calls when in roaming mode.
International calling	For international calls.

Option	Function
Dial when INTL roaming	For calls when in international roaming mode.
Cancel all barring	Select this option to cancel all the types of call barring.
Change password	Select this option to change the password. (see your service provider for more details)

4. After selecting one of the options, scroll to **Activate** and press [OK] to activate the call barring.
5. Scroll to **Off** to deactivate the call barring.
6. Scroll to **Query status** to check if the selected type of call barring is activated or deactivated.

Activate call waiting


If your SIM card supports the call waiting feature, you can activate it through your service provider. From the main menu,

1. Select **Settings > Call settings > Call waiting**.
2. Select the SIM card.

3. To activate the call waiting, scroll to **Activate** and press [OK].
4. To deactivate the call barring, scroll to **Off** and press [OK].
5. Scroll to **Query status** and press [OK] to check if the call waiting is activated or deactivated for the selected SIM card.

Activate any-key answer mode

To answer the incoming call using any key from your keyboard, from the main menu,

1. Select **Settings > Call settings > Answer/Reject mode**.
2. Scroll to **Any-key answer** and press [Select].
3. Press [Back] or  to save the changes.

Activate SMS replying

To activate automatic SMS reply to a rejected incoming call, from the main menu,


1. Select **Settings > Call settings > Answer/Reject mode**.
2. Scroll to **Reply SMS after reject** and press [Select].

3. Press [Back] or  to save the changes.

Note: If you activate **Reply SMS after reject**, when you reject a call, a message will show in the screen. Press [OK] to reply using any of the SMS templates. If you don't want to reply using a SMS template, press [Cancel].

Activate Connect prompt mode

To activate Connect prompt mode, from the main menu,


1. Select **Settings > Call settings > Connect prompt**.
2. Scroll to **Activate** and press [OK], to activate the mode.
3. Press [Back] or  to save the changes.

IP shortcut key

To select an IP shortcut key, from the main menu,

1. Select **Settings > Call settings > Others > IP shortcut key**.
2. Select the SIM card.
3. Scroll to desired IP shortcut key and press [Options].

Settings

- To activate the selected shortcut key, select **Activate** and press [OK].
- To change the IP shortcut key's number, select **Modify** and press [OK]. Enter the new number and press [OK] to save.
- Press [Back] or  to save the changes and go to previous screen.

50 sec voice call alert

To activate the **50 seconds voice call alert**, from the main menu,

- Select **Settings > Call settings > Others > 50 sec voice call alert**.
- Scroll to **Activate** and press [OK] to activate the feature.

Dual-SIM settings

In this section, you can change settings related to the two SIM cards. From the main menu,

- Select **Settings > Call settings > Dual-SIM**.

2. You will be able to select any of the following options by pressing [OK]:

Option	Function
Set Dual SIM call divert	To set dual call diverting. You will need to set MSISDN for both cards first. (see your service provider for more details)
Standby mode	You can select standby mode for SIM card 1, 2 or both cards.
Main SIM settings	Select this option to set a default SIM card to make calls, send SMS messages and call using speed dialing. You will also be able to select if you want to reply calls and/or SMS using the SIM card that receive the call or SMS.
Set SIM name	Select this option to change the SIM cards names.

Option	Function
Dual SIM setting	This option will take you through a basic setup to change the SIM cards names, the Main SIM settings, the caller ID for both lines and cards and call diverting for both SIM cards.
Help	Select this option to see a help dialog box for the Dual-SIM settings.

Network settings

In this section, you can change settings such as network selection, activate/deactivate flight mode, line selection and etc.

Network selection

From the main menu,

1. Select **Settings > Network setting > Network selection.**
2. Select the SIM card and press [OK].

3. Scroll and select **Auto select** to make an automatic network selection.
4. Scroll and select **Manual select** to make a manual network selection. The phone will search for available networks and you will be able to select one of them. Scroll to the desired network and press [OK] to select and save it.

Line selection

From the main menu,

1. Select **Settings > Network setting > Select line.**
2. Select the SIM card and press [OK].
3. Scroll to the desired line and press [OK] to select it.

Hiding your ID

From the main menu,

1. Select **Settings > Network setting > Hide ID.**
2. Select the SIM card and press [OK].
3. Select **Hide ID** to hide your outgoing identification.

Note: Check with your service provider for more details.

Activate Flight mode

From the main menu,

1. Select **Settings > Network setting > Flight mode.**
2. Scroll to **Activate** and press [Select] to activate flight mode for your cell phone.
3. Scroll to **Select when power on** and press [Select] to activate this mode. When this mode is activated, every time you turn on your cell phone you will be prompt to turn on in normal mode or in flight mode.

Phone settings

In this section, you can change settings such as time and date, language, activate auto power on/off and etc.

Time and date settings

From the main menu,

1. Select **Settings > Phone settings > Time and date.**
2. To change the phone's time, scroll to **Set time** and press [OK]. Enter the desired time and press [OK] to save.

3. To change the phone's date, scroll to **Set date** and press [OK]. Enter the desired date and press [OK] to save.
4. Select **Time format** to change the time format. Select **12 hours** or **24 hours** and press [OK] to save.
5. Select **Date display type** to change the date display format. Select **Year-Mon-Day**, **Mon-Day-Year** or **Day-Mon-Year** and press [OK] to save.

Language settings

From the main menu,

1. Select **Settings > Phone settings > Select language**.
2. To change the phone's language, scroll to **English** or **Español** (Spanish) and press [OK] to select the language and save.

Shortcut settings

In this option you will be able to change the Shortcut applications for **left**, **right**, **up** and **down** keys from the main key. From the main menu,

1. Select **Settings > Phone settings > Shortcut settings**.

2. Scroll to the desired key and press [OK].
3. Scroll up and down to choose one application and press [OK] to apply this application as a shortcut for the selected key.

Auto power on/off settings

From the main menu,

1. Select **Settings > Phone settings > Auto power on/off**.
2. Scroll to **Auto power on** or **Auto power off** and press [On].
To activate auto power on or off.
3. Scroll to **Auto power on** or **Auto power off** and press [Edit]. To edit the auto power on or off settings.
4. To change the time, scroll to **Time** and press [Edit]. Enter the desired time and press [OK].
5. To change the repeat settings, scroll to **Mode** and select one of the following:

Option	Function
Once	Set to auto power on/off only once.

Option	Function
Daily	Set to auto power on/off at the same time every day.
Weekly	Set to auto power on/off weekly.


Note: If you choose **Weekly**, you will be able to set the days of the week for it. Scroll down, and a table will be shown. Scroll left and right to navigate through the days of the week. Press [Select] to mark and [Cancel] to unmark one day of the week.

6. Press [OK] to save and activate the power on/off mode.

Power management

To see the battery status of you cell phone, from the main menu,

1. Select **Settings > Phone settings > Power management.**

2. Press [Back] or  to go to the previous screen.

Restore to factory settings

From the main menu,

1. Select **Settings > Phone settings > Restore settings.**

2. You will need to enter the password to restore to factory settings. Enter the password and press [OK], to restore the settings.

Display settings

In this section, you can change settings such as desktop wall paper, screen contrast, keypad light and etc.

Change the wallpaper

From the main menu,

1. Select **Settings > Display settings > Wallpaper settings**.
2. Scroll to the desired wallpaper, press [OK] to preview, and press [OK] again to set it as wallpaper.

Note: If you select **More wallpapers** you will be able to select a picture from the microSD[™] card. Navigate through the files and press [Select] to set the file as wall paper. See 33 for navigation controls and details.

Disable clock and network displaying

Enable/disable the clock and network info displaying from the main screen. From the main menu,

1. Select **Settings > Display settings > Idle display settings**.
2. Scroll to **Time & date** and press [Cancel] or [Select] to disable or enable displaying the clock on the main screen.
3. Scroll to **Service provider** and press [Cancel] or [Select] to disable or enable displaying the network information on the main screen.

Select power on/off animation effect

This option will let you change the power on/off animation effect. From the main menu,

1. Select **Settings > Display settings > Idle display settings**.
2. Scroll to **Power on display** or **Power off display** and press [OK] to change the power on or off animation effect.
3. Scroll to **Default** and press [OK] to select the default animation.

4. Scroll to **More animation** to choose a video to set as on/off animation effect.

Note: Navigate through the files and press [Select] to set the video file as animation effect. Press [Play] to preview the video. See page 33 for navigation controls and details.

Change the contrast settings

From the main menu,

1. Select **Settings > Display settings > Contrast**.
2. Scroll left and right to change the contrast level and press [OK] to save.

Adjust the display backlight time

From the main menu,

1. Select **Settings > Display settings > Backlight**.
2. Scroll up and down to change the duration (in seconds) of the display backlight. Select **Always on** to disable the display auto off.
3. Press [OK] to save.

Adjust the keypad light time

From the main menu,


1. Select **Settings > Display settings > Keypad light**.
2. Scroll up and down to change the duration (in seconds) of the keypad light. Scroll to **Night mode** to disable the keypad light auto off. Scroll to **off** to turn off the keypad light.
3. Press [OK] to save.

Security settings

From the main menu,

1. Select **Settings > Security settings**.
2. You will be able to select any of the following options by pressing [OK]:

Option	Function
PIN	Select this option to change the PIN number from both SIM cards.

Option	Function
PIN2	Select this option to change the PIN2 number from both SIM cards.
Privacy	Select this to prevent other people to use your phone applications. To use the selected applications, the password needs to be entered. Applications that can be locked: Call logs, Message, Names, File manager, Calendar, Udisk.
Auto keypad lock	Select this option to activate the auto keypad lock. Options are: Off, 5 secs, 15 secs, 30 secs, 1 min and 5 min.
Lock screen by end-key	Select this option to activate the Lock screen by end key mode. This mode will lock the screen when the end-key () is pressed.

Option	Function
Power-on password	Select this option to activate the Power-on password mode. This mode will ask you to input a password (4-8 numbers). The phone will only be turned-on if the password is entered.
Guardlock	Select this option to activate the Guardlock mode. If you change any SIM card from you phone you will need to enter the Guardlock password. If the password is not entered, the phone will automatically send a SMS message to phone number you set in the Guardlock settings warning you that the SIM card was changed.